



## 1 Start by deciding if you would like an INSIDE or OUTSIDE mount:

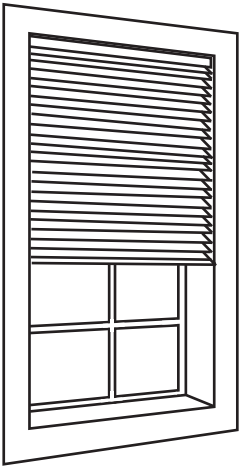

Picture of  
Inside Mount

Inside mounted treatments are contained within your window frame. You may prefer inside mount because it provides a finished, built-in look without covering the window molding; it is also suggested for the 1st layer of a layered window treatment.

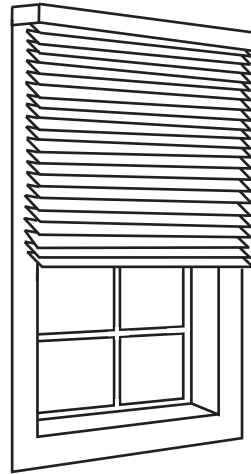



Picture of  
Outside Mount

Outside mounted treatments are mounted on your wall or molding. They are often used to make a window look larger, when windows aren't square or when there is not sufficient frame depth for inside mounting.

## 2 If You Decided on OUTSIDE mount:


- Install on the outside of the window frame.
- Measure the width of the window. The shade/blind should be at least 1/2" wider than the window opening.
- Begin measurement at the top edge of the window frame to the top of the window sill.
- If you don't have a window sill, add 1 1/2" to the height measurement.
- Please provide each precise measurement to the nearest 1/8".

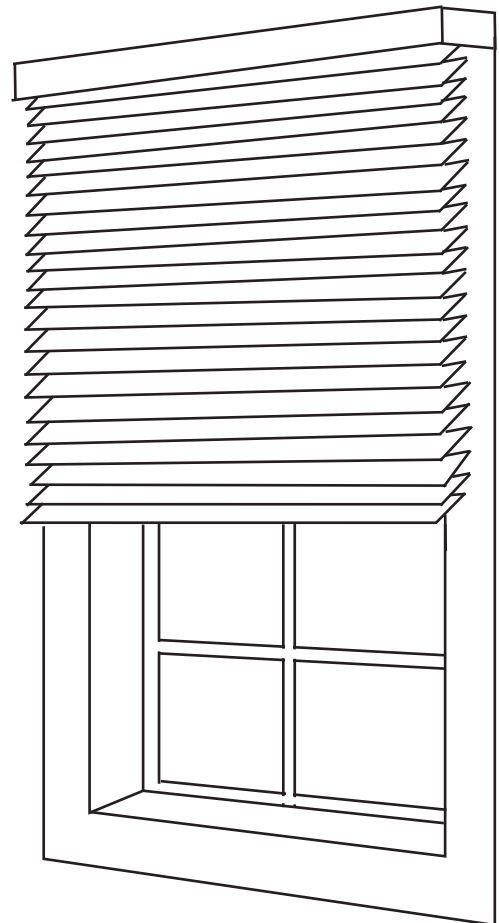

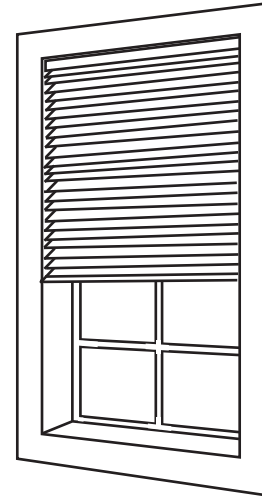**3** If You Decided on INSIDE mount:


- Install on the inside face of the window frame.
- You must have at least 1" of flat surface on the inside casing for brackets.
- Please provide each precise measurement to the nearest 1/8".

- Measure the width at top, bottom and center of opening; use the narrowest of the three measurements for your width.
- Measure height from the inside of the frame to the bottom of sill. Measure at both sides and center; use the longest measurement for your height.

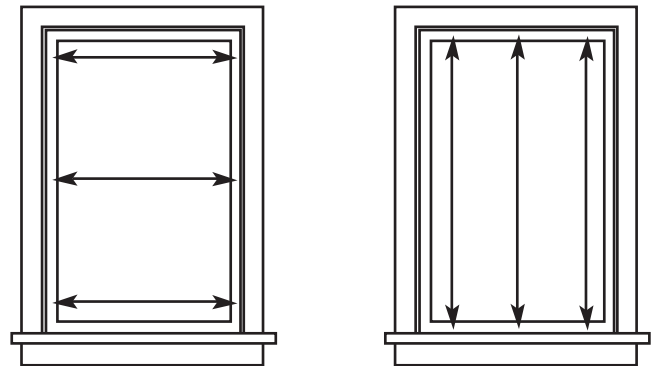**4** Measuring Tips:

- Use a metal or wooden ruler; fabric rulers could distort measurements.
- Measure every window – windows that appear to be the same size often are not.

## How to read a ruler

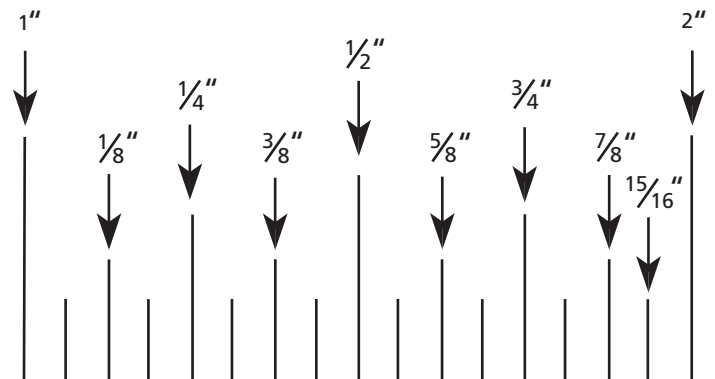

Round your measurements down to the nearest 1/8"

For example  $1\frac{4}{16}$ " rounds down to  $\frac{7}{8}$ "